

Kodiak Switch

FROMECO

INSTRUCTIONS

The Fromeco Kodiak switch is easy and straight forward to use.

Kodiak switch has 3 inputs. There are 2 Deans Ultra plugs on the back of the unit, and 1 Deans Ultra on the front of the Unit.

1. Plug your battery into the Deans Male on the back of the Kodiak switch. There is only one Deans male on the unit.
2. Plug your RX connection Lead into the Deans Female on the back of the Kodiak switch. **NOTE: Fromeco does not supply this lead. It must be a Deans Male, that goes to a connection of your choice. We would recommend Deans Male to several JR or Futaba Male plugs.**
3. Turn your Kodiak switch ON by actuating the switch. Blue power LED will illuminate, 2 digit display will read 0.0.

Operation

The Kodiak has a built in mA counter. To conserve space Fromeco designed the Kodiak to only have 2 digits. The display reads right to left and has a point period between the two digits.

The first digit on the right is the hundreds place. A 1 equals 100mAh, a 5 would equal 500mAh.

The Second digit on the left is the thousands place. A 1 equals 1000mAh, a 5 would equal 5000mAh.

A reading of 1.5 would equal 1500mAh, and a reading of 4.2 would equal 4200mAh, and so on.

The Kodiak will retain its readings from flight to flight through power cycles. To reset the Kodiak mA counter the switch must be cycled ON/OFF/ON in rapid succession.

IMPORTANT! The Kodiak switch should be used with Caution in regards to its mA counter. It is highly recommended that you have a firm understanding of how batteries work. NO BATTERY should ever be discharged

to its full capacity while in flight! Doing so will result in certain failure of power to your flight systems. The mA counter on board the Kodiak is meant for indication purposes only. It is not as accurate as an "instrument" such as a VOM.

Kodiak Hole Template



Remove this Area

Fromeco Scale Avionics LLC® warrants that at the time of shipment and for a period of ninety (90) days thereafter the Product (Fromeco Scale Avionics LLC® (Kodiak) shall conform to the functional description contained herein, and shall be free from defects in workmanship. If any defect within this warranty appears, the Purchaser shall notify FROMECO immediately. Buyer's sole and exclusive remedy in the event of a defect is expressly limited to (at Fromeco Scale Avionics LLC® sole election) correction of the defect by replacement or issuance of credit in the amount of the price of the Product, for any Product which proves defective within the above warranty. The foregoing warranties are the sole and exclusive warranties made by Fromeco Scale Avionics LLC®. THESE WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. In no event shall Fromeco Scale Avionics LLC® be liable to Purchaser, end user, or any other party or individual for any incidental, special or consequential damages of any nature that are or could be attributable to the product. Fromeco Scale Avionics LLC® maximum liability shall not exceed the purchase price of the Product under this agreement. Use of the Product by Purchaser shall constitute Purchaser's acceptance of these terms.